

# VC-HD6

Manual v2.1



July 2017

## Contents

Contents .....	2
1. What is the VC-HD? .....	3
2. Supported Media Formats .....	3
3. In the Box .....	4
4. Setup Instructions .....	5
5. Remote Control .....	8
6. Settings Options .....	9
7. Additional Video & Slideshow Options .....	12
8. Content Activation Options .....	14
9. Programming Content .....	15
Looping .....	15
Button Activation .....	18
PIR Activation .....	25
10. PIR & Button Cable Wiring .....	27
11. Update Notes .....	28

## Thank you for purchasing the VideoClip-HD

The VC-HD is one of a range of products we offer specific to the heritage marketplace. We are confident that we have other products you will find useful and look forward to hearing from you again soon.

**T:** +44 (0)1639 767007 | **W:** [www.blackboxav.co.uk](http://www.blackboxav.co.uk)

## 1. What is the VC-HD?

VideoClip HD is a compact, stand-alone, high definition digital media player. It can be used to display and distribute videos, images and audio over a screen/monitor that is connected to the device via HDMI input. The VC-HD supports a wide range of digital media files which can be stored on a SD card or USB stick. A remote is also supplied for easy player control and access to settings.

## 2. Supported Media Formats

Video Codecs Supported	MPEG1/2/4, H.264, AVC, VC1, WMV, RM/RMVB, DivX3/4/5/6, Xvid3/4/5/6
Video Formats Supported	RM/RMVB, AVI, TS, M2TS, MTS, MKV, MOV, FLV, DVD-ISO, BD-ISO, VOB, MPG, DAT, ASF, TP, TRP, WMV, IFO, SWF, 3GP, EVO, DIVX, MP4, OGM
Audio Codecs Supported	HE, LPCM, AC3, DTS, DTS-HD M (DTS output can be down-mixed), Dolby Digital AC3 5.1 stereo

Audio Formats Supported	MP3, WMA, WAV, OGG, FLAC, AAC, LC-AAC, APE (Under 128KHz)
Image Formats Supported	JPEG @ 1920x1080px
Frame Rates & Bit Rates	25, 30, 50 or 60 frame rate fixed. 60000 kbps maximum bit rate.


If you need to reformat any files we recommend 'Format Factory'.  
This can be downloaded for free here:

<http://www.pcfreetime.com/>

### 3. In the Box



1. VideoClip HD Player
  2. HDMI Cable
  3. Power Supply
  4. Remote Control
- Also:** 6x Button Cables (*pictured below*)

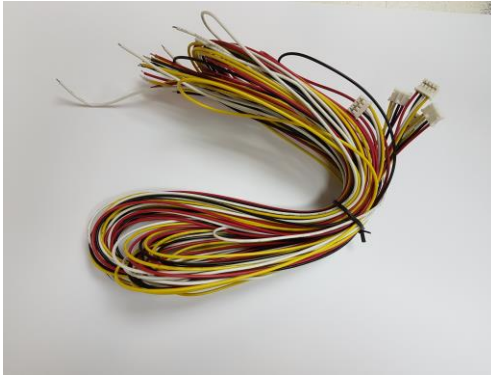


## 4. Setup Instructions

Connecting your VC-HD is simple and straight forward. You will need the following:

- The VideoClip HD Player
- 12V DC Power Adapter
- HDMI Cable
- HDMI Compatible Monitor or TV (not included)
- SDHC Card or USB Stick (not included)
- Terminal block button connection (included if specified at order)
- Buttons (not included / not required for looping playback)

## FRONT VIEW

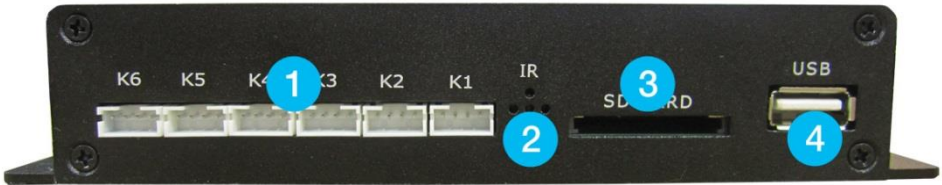

## REAR VIEW



1. Button 1-6 input
2. Remote IR sensor
3. SDHC Card Slot
4. USB Slot
5. 12v DC in
6. Power on/off
7. HDMI Out (HD TV)
8. 3.5mm Audio
9. I/O
10. RS323 Control

*Note: The CVBS (Video Out (TV)) has been disabled on this model.*

### **1.Powering Your VC-HD**

Connect the supplied 12V DC Adapter to the '12V DC in' to give power to the device.

### **2.Connecting Your VC-HD to a TV or Monitor**

Connect one end of the HDMI cable to the 'HDMI out' on the back of your VC-HD, connect the remaining end to the HDMI slot of your device.

### **3.Connect Buttons (not required for looping playback)**

Connect 'terminal block button adapter' to appropriate slot(s) of the 'button input 6-1', attach needed number of buttons to terminal blocks as required. (See section 10 for button wiring).




### **4. Insert Content**

View '9.Programming Content' section for programming instructions. Insert either an SDHC card or USB stick with uploaded content into USB or SDHC slot.

### **5. Power On**

Power on your display device, then power on your VC-HD. The VC-HD will automatically play any attracter screen video/images on boot up. Button activated content will play when appropriate button is pushed.

## 5. Remote Control

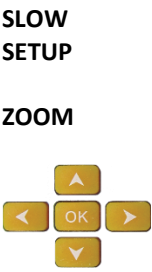	<p><b>Power:</b> Press to power VC-HD on/off.</p>
<p><b>INFO</b></p>	<p><b>Press</b> to view information for content currently playing.</p>
<p><b>MUTE</b></p>	<p><b>Press</b> to mute audio output, press to unmute.</p>
	<p><b>Press</b> to play content in corresponding folder (folder 1, 2, 3 etc.)</p>
<p><b>REPEAT</b></p>	<p><b>Press</b> while video file is playing to select repeat options, repeat all, repeat title, repeat off</p>
<p><b>TIME SEEK</b></p>	<p><b>Press</b> to jump to specific time point on video.</p>
<p><b>TV MODE</b></p>	<p><b>Press</b> to switch between NTSC Interlaced, NTSC Progressive, PAL Interlaced and PAL Progressive.</p>
<p><b>HOME</b></p>	<p><b>Press</b> to open main menu and access File Manager, Movies, Music, Photo and System Setup.</p>
<p><b>MENU</b></p>	<p><b>Press</b> to access filetype menu settings, i.e when video plays you access video settings, when images are playing you access slide options.</p>
<p><b>SLOW SETUP</b></p>	<p><b>This</b> button has been disabled for the VC-HD</p>
<p><b>SETUP</b></p>	<p><b>Press</b> this to access core system settings - System, Audio, Video, Misc.</p>
<p><b>ZOOM</b></p>	<p><b>Press</b> to zoom in/out when playing photos or video</p>
	<p><b>Navigation:</b> Press to navigate menus</p>
<p><b>VOL +/-</b></p>	<p><b>Press</b> to increase/decrease volume levels</p>
<p><b>AUDIO</b></p>	<p><b>Press</b> to display video audio track information</p>
<p><b>SUBTITLE</b></p>	<p><b>Press</b> to activate subtitles if available</p>
<p><b>RESUME</b></p>	<p><b>Press</b> to resume play</p>
<p><b>ANGLE</b></p>	<p><b>This</b> button is disabled on the VC-HD</p>
<p><b>PAUSE</b></p>	<p><b>Press</b> to pause playback</p>




<b>RETURN</b> <b>STOP</b> << >>  << >>	<b>Press</b> to return to previous navigation menu <b>Press</b> to stop playback <b>Press</b> to fast forward or rewind current file <b>Press</b> for previous or next file in list
---	--


## 6. Settings Options

Using the Remote Control you can access a number of settings options for the VC-HD by pressing the '**Setup**' button. Here you have access to 'System, Audio, Video and Misc' settings. Navigate between options using the '< ^ > v ok' buttons.


SYSTEM

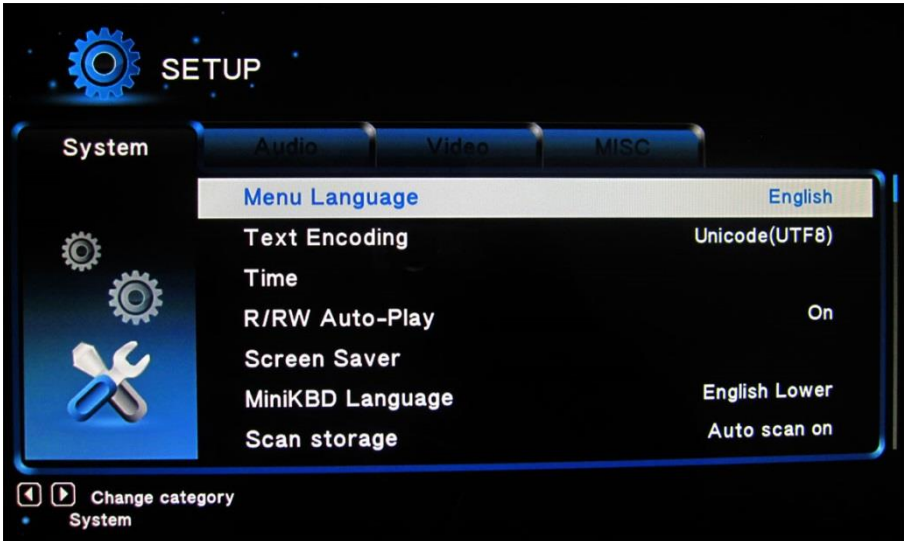


## AUDIO

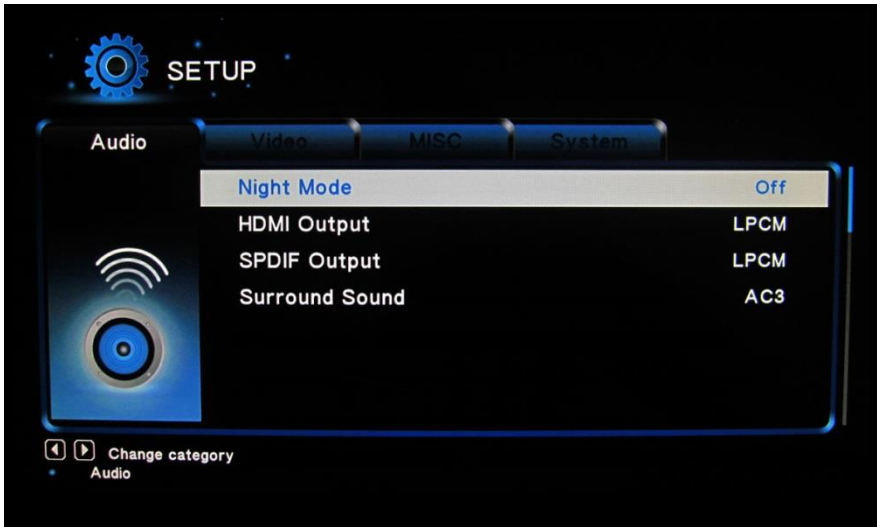

## VIDEO

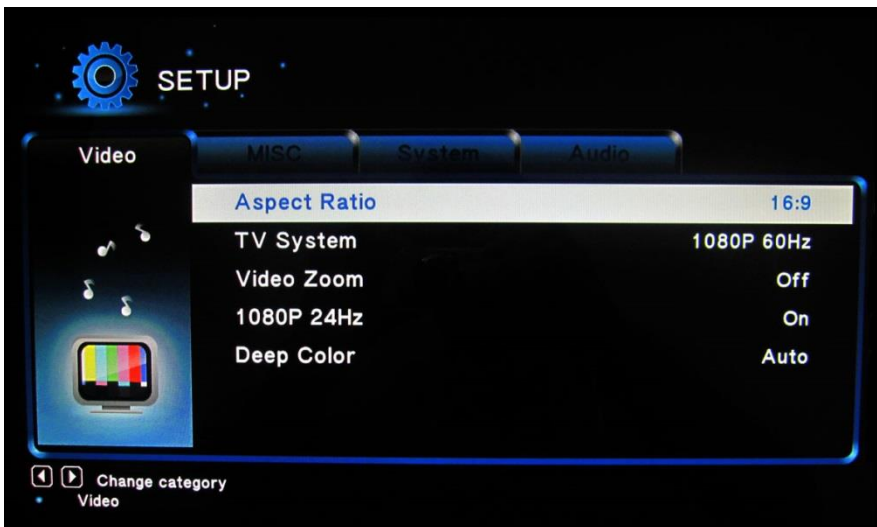

## MISC

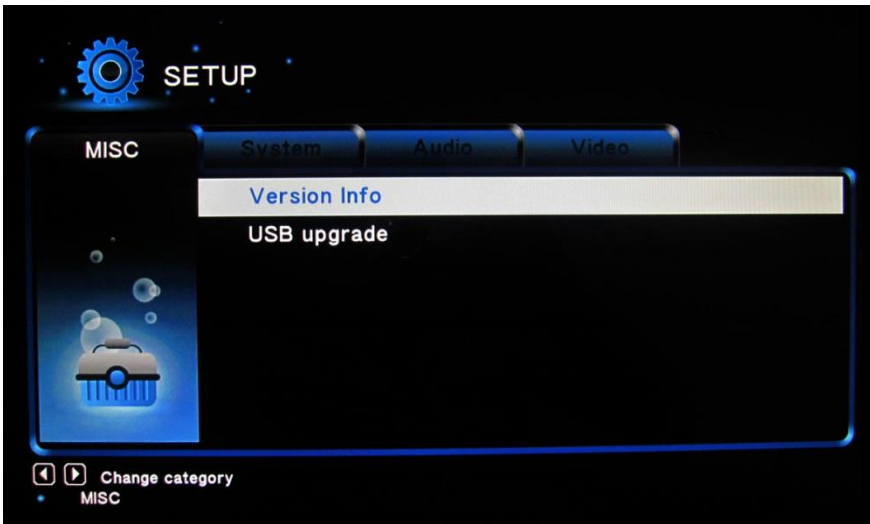

## 7. Additional Video & Slideshow Options

To access additional Video & Slideshow options the player must be currently playing either a video (for video options) or image (for slideshow and image options). Whilst playing either a video or image press the 'Menu' button.

### SLIDESHOW

Here you can access slideshow options including repeat, transition and timing;

**Repeat** - Set repeat mode: Off/all/shuffle

**Slide Timing** - Set length of time each slide is displayed: 2/5/10/30 seconds

**Slide Transition** - Set transition mode: Shuffle all / flip / quartet / slide / centre extend / 2D 3D expand / dissolve / fade in out / cross fade kenburn




## VIDEO

Here you can access video options, including subtitle, audio, repeat options and video settings;

**Repeat** - Set repeat mode: All/off/title (Title repeats first video in folder only)

**Video Settings** - Set video brightness/contrast/saturation/hue

**NOTE:** *These settings will be saved on your SD card or USB stick in a '.part' file and '.Theatre' folder created by the VC-HD. If this file is deleted or new content is added these settings will be reset.*

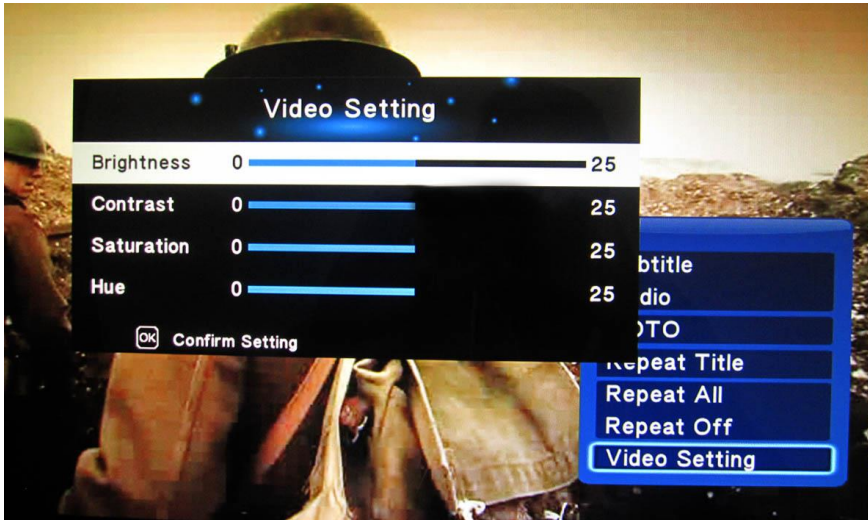

## 8. Content Activation Options

The VC-HD can play video, audio and image filetypes. These can be set to play in a looping fashion (requiring no user input) or can be button activated in a number of ways;

### LOOPING

The VC-HD can be set to play a slideshow or video(s) in a constant looping fashion, this requires no user input or button activation it will simply loop through content upon startup.

### BUTTON ACTIVATION & PIR

The VC-HD can play video, images or audio upon button or PIR activation. This is achieved by programming the button/PIR input(s) to perform a number of actions;

Play file / play folder / next / previous / volume up / volume down / mute

Inputs are programmed via a text file in conjunction with content placed into specific folders; see the programming section for more information.

## 9. Programming Content

The VideoClip HD is a High Definition content player, video and images should be in HD with a resolution of 1920x1080.

It has been designed to make programming easy whilst offering flexibility in activation options. To program your VC-HD you will need;

- 1) SDHC card or USB stick (formatted to FAT32)
- 2) Content in a supported file format (see 2. SUPPORTED MEDIA FORMATS)
- 3) A PC or laptop with Windows OS (Mac not supported)

The maximum supported file size of the FAT 32 SD Card is 4GB, but if you format your card to NTFS, there is no file limit. You can also re-encode the file so it is below 4GB.


### Looping

The VC-HD plays content stored in the root of the storage device on a constant loop as standard. Content is played in name order i.e 01 -> 02 -> 03.

The VC-HD can loop video, images or audio if there is a mixture of content it will play video -> image -> audio in that order, no matter the filename.

(This means that video files titled 04, 05, 06 will play before image files titled 01, 02, 03)


### LOOPING EXAMPLE 1: LOOPING VIDEO

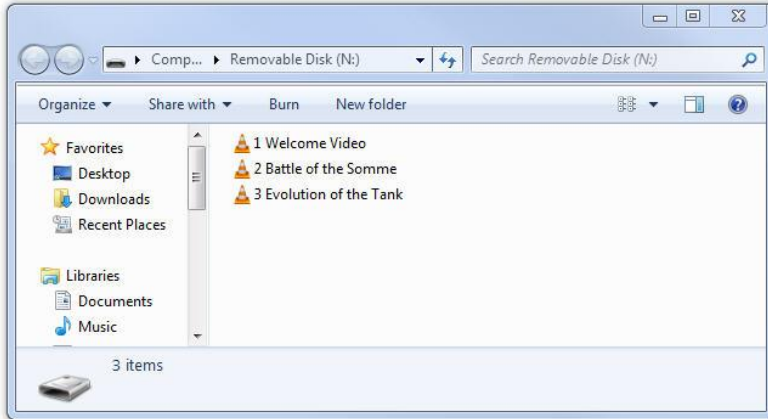

With this configuration the player will loop constantly through all videos in the following order: 1 Welcome Video -> 2 Battle of the Somme -> 3 Evolution of the Tank -> 1 Welcome Video.... and so on.




## LOOPING EXAMPLE 2: LOOPING VIDEO & IMAGES

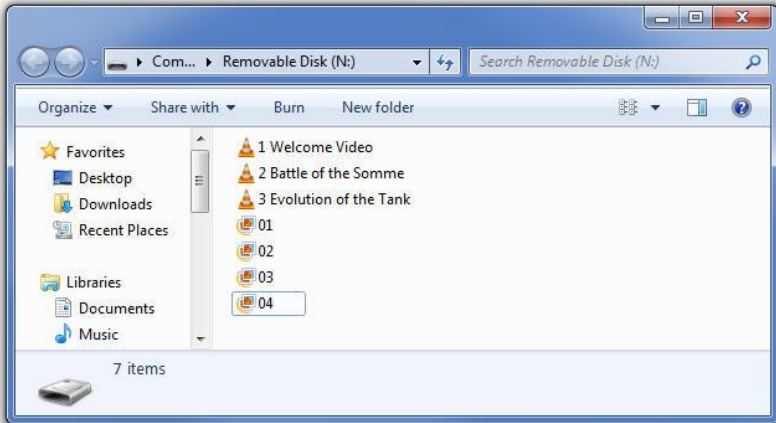

With this configuration the player will loop constantly through all videos and then all images in the following order: 1 Welcome Video -> 2 Battle of the Somme -> 3 Evolution of the Tank -> 01 -> 02 -> 03 -> 04 -> 1 Welcome Video... and so on.

## LOOPING EXAMPLE 3: IMAGES WITH AUDIO

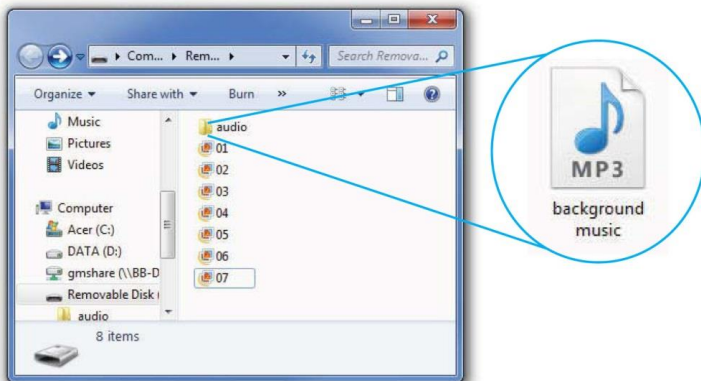

With this configuration the player will loop constantly through all images, it will also play the audio file located in the folder 'audio' as background music. The audio will restart with the slideshow (i.e after the final slide is shown and the slideshow begins again).

For more slideshow options view '[7.Additional Slideshow and Video Options](#)'

### Button Activation

The VC-HD can be programmed to play content upon button activation in a number of different ways, the looping function also allows the creation of an attracter screen which will loop until a button is activated. The available button options are;

- 1) Push to play single file
- 2) Push to play folder (a collection of files in order)
- 3) Push for next file
- 4) Push for previous file
- 5) Push to put volume up
- 6) Push to put volume down
- 7) Push to mute volume
- 8) Uninterruptible or interruptible playback (unable to trigger again during play)


Buttons are programmed using an 'autoplay.txt' file that is added to the SDHC or USB storage device along with your content. There are templates available under 'Test Content' on our support page at: [www.interpretationshop.co.uk/support](http://www.interpretationshop.co.uk/support)

A configuration file will appear as follows (create a .txt file by right clicking on desktop > new > text document):


`irmode=1` (puts the VC-HD in button mode)  
`01=01/` (button 1 plays all files in folder '01')  
`02[n]=02/video1.mpg` (button 2 plays specific video in folder '02')  
  
`NEXT=3` (button 3 plays next file)  
`PREV=4` (button 4 plays previous file)  
`vo1_plus=5` (button 5 puts volume up)  
`vo1_minus=6` (button 6 puts volume down)  
`MUTE=7` (button 7 mutes volume)

**Note:** The [n] in '02n=02/video1.mpg' makes that activation uninteruptible.

### BUTTON EXAMPLE 1: 6 BUTTON - VIDEOS & ATTRACTA VIDEOS

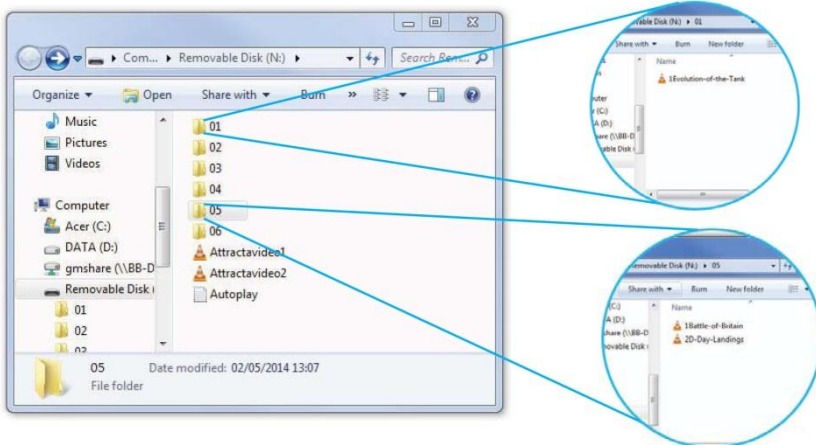

The above content will loop through 2 videos 'AttractaVideo1' and 'AttractaVideo2' until a button is pressed, the following 'Autoplay.txt' file assigns actions to 6 buttons;

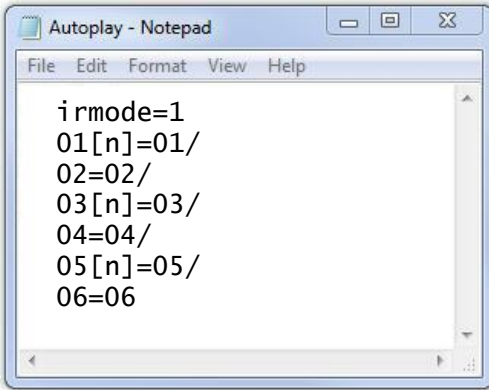

```

i rmode=1
01[n]=01/
02=02/
03[n]=03/
04=04/
05[n]=05/
06=06

```

Puts the VC-HD in button mode

Button 1 plays folder '01'

Button 2 plays folder '02'

Button 3 plays folder '03'

Button 4 plays folder '04'

Button 5 plays folder '05'


Button 6 plays folder '06'

*01, 03, and 05 are uninterruptible [n].*

The above 'Autoplay.txt' allows each button to play all files in assigned folder. Folders '01, 02, 03, 04, 06' contain a single video file i.e '1Evolution-of-the-Tank' pressing button 1 will play this file then return to the attracta screen videos.

Folder '05' has two video files '1The-Battle-of-Britain' and '2D-Day-Landings', pressing button 2 will play both files before returning to attracter screen videos.


**BUTTON EXAMPLE 2: 4 BUTTON - 2 FOLDERS + NEXT/PREV CONTROL**

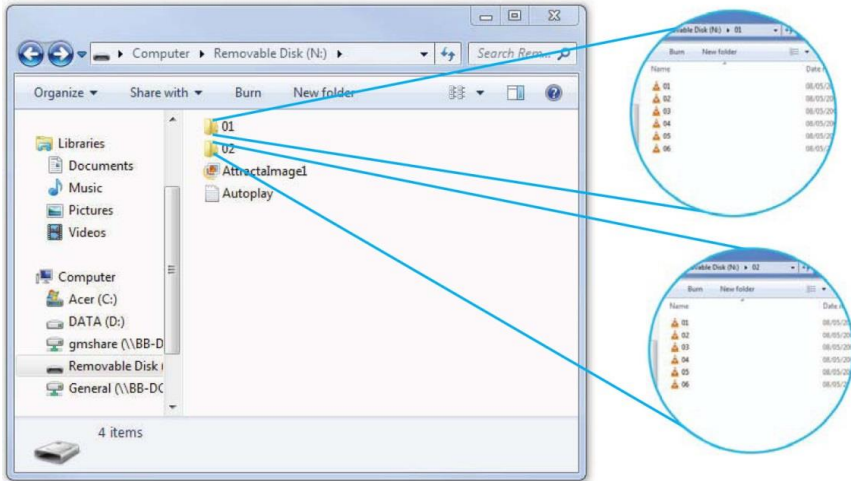

The above content will display a single image 'Attractaimagel' until a button is pressed, the following 'Autoplay.txt' file assigns actions to 4 buttons;

- Puts the VC-HD in button mode
- Button 1 plays folder '01'
- Button 2 plays folder '02'
- Button 3 plays next file
- Button 4 plays previous file


*02 is uninterruptible*

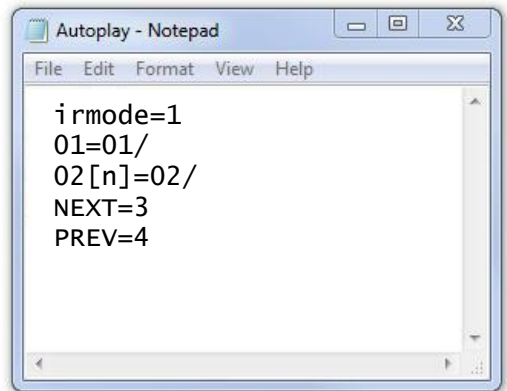


Folder '01' and folder '02' both contain 6 video files each. The above 'Autoplay.txt' assigns button 1 to folder '01' and button 2 to folder '02'.

Once buttons 1 or 2 are pressed the first video file in the corresponding folder will play. Pressing button 3 will cycle to the next video, button 4 will cycle to the previous. Once the final video in the folder has been played the VC-HD will return to the attracter image.

### **BUTTON EXAMPLE 3 - 5 BUTTON, VIDEOS ON CONSTANT LOOP WITH NEXT/PREV/VOL+ /VOL- /MUTE**

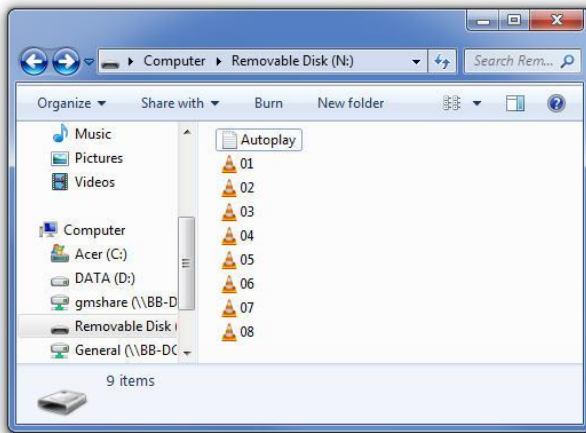

This content will loop constantly through each video file '01 - 08' unless 'next/prev' button is pressed;

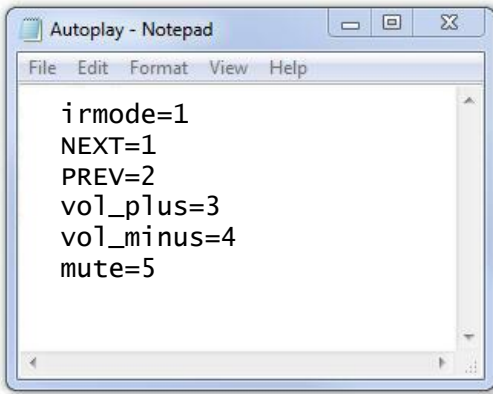


- Puts the VC-HD in button mode
- Button 1 plays next file
- Button 2 plays previous file
- Button 3 increases volume
- Button 4 decreases volume
- Button 5 mutes volume

This 'Autoplay.txt' assigns 'NEXT' and 'PREVIOUS' commands to button 1 and 2. The VC-HD will continually loop through each video until these buttons are pressed.

Button 3 and 4 adjust the volume while button 5 will mute and unmute the player.


#### BUTTON EXAMPLE 4: PLAY ALL / 5 INDIVIDUAL FILES

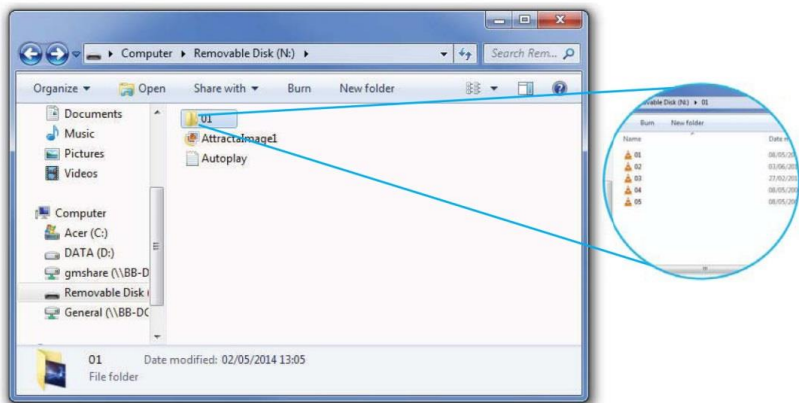

The above content will display a single image 'AttractImage1' until a button is pressed, the following 'Autoplay.txt' file assigns actions to 5 buttons;

Puts the VC-HD in button mode

- 1 plays all files in folder '01'
- 2 plays file '01' in folder '01'
- 3 plays file '02' in folder '01'
- 4 plays file '03' in folder '01'
- 5 plays file '04' in folder '01'
- 6 plays file '05' in folder '01'

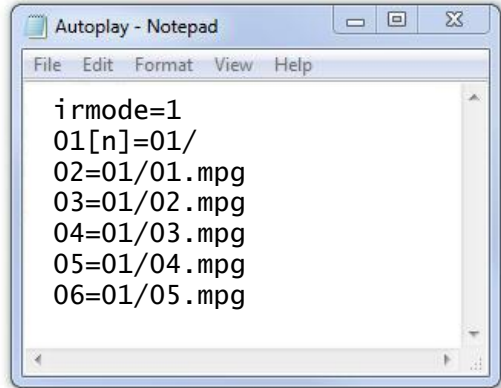

```

i rmode=1
01[n]=01/
02=01/01.mpg
03=01/02.mpg
04=01/03.mpg
05=01/04.mpg
06=01/05.mpg

```

*01 is uninterruptible, once pressed all content will play before another button can be used.*

This 'Autoplay.txt' assigns folder '01' to button 1, essentially becoming a 'PLAY ALL' button, when pressed the player will display each video in sequence then return to the attracter screen.

Buttons 2 - 6 have been assigned to **specific video** files within folder '01', when pressed only that video will play before the VC-HD returns to the attracter screen.

**NOTE:** When assigning specific files to a button the full filename including filetype must be used i.e 'video1.mp4' not simply 'video1'.




## PIR Activation

The VC-HD can be programmed to play content upon PIR activation.

A single PIR can be connected via the I/O input and used to activate a folder of content; this can include video, audio or image files.

A looping display can be utilised in PIR mode just as in the previous modes, this means the VC-HD can display video or images in a looping fashion until the PIR activates folder 01 and the content found within.


## PIR EXAMPLE: FOLDER ACTIVATION WITH LOOPING SLIDESHOW

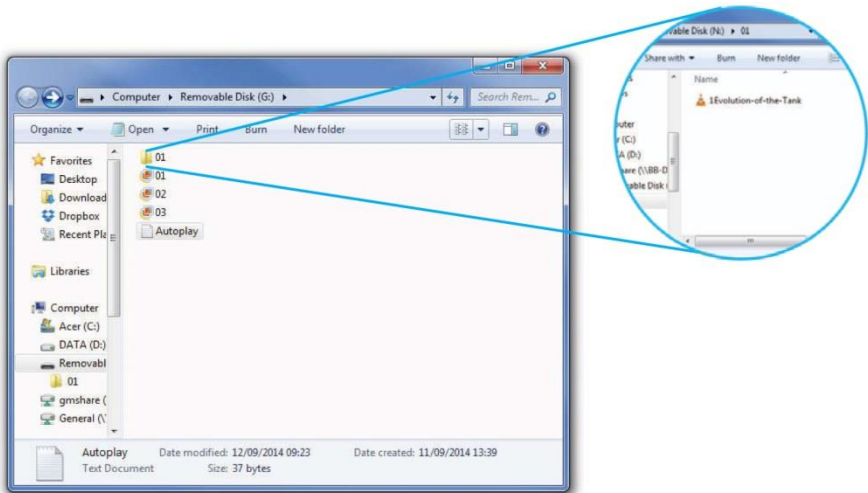

The above content will loop through 3 images '01', '02' and '03' until the PIR is activated it will then play the video located in folder '01' before returning to the looping slideshow awaiting another PIR

activation, the following 'Autoplay.txt' file places the VC-HD into PIR mode.

**NOTE:** The PIR is sold separately and must be connected via the I/O port, once connected the VC-HD is set to uninterrupted playback which means any files located in folder '01' will be played through in their entirety before the PIR can be activated again.

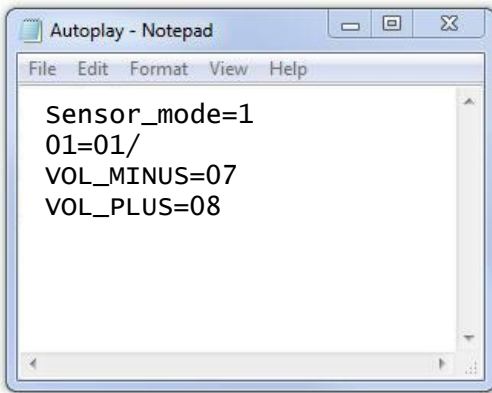

```

Sensor_mode=1
01=01/
VOL_MINUS=07
VOL_PLUS=08

```

VC-HD placed in PIR MODE  
PIR plays folder '01'  
Volume set to 15

This 'Autoplay.txt' assigns folder '01' to PIR activation, essentially becoming a 'PLAY ALL' button, when movement is sensed the player will display each video in sequence then return to the attracta screen (in this example it is a single video).

Programming templates are available from our support page under 'Test Content':

**[Interpretationshop.co.uk/support](http://Interpretationshop.co.uk/support)**


## 10. PIR & Button Cable Wiring

Information on wiring buttons and PIR connections; Button cables are provided with the VC-HD however the PIR is sold separately (we recommend PIR's supplied by blackbox-av);

### PIR



### BUTTON WIRING

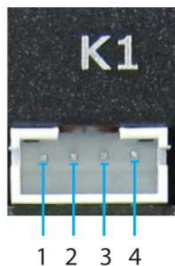

- 1 - + 12v
  - 2 - Button (no)
  - 3 - Button (com)
  - 4 - 0v
- } LED

## 11. Update Notes

Updates to the original VC-HD version 1.1 (may 2014)

### November 2014 v1.2

- Added ability to set button as noninterruptible (add 'n' in text file)
- 6 x Terminal block button adapters included with VC-HD
- SD Card slot cover included

### January 2015 v1.3

- Added 'PIR & BUTTON CABLE WIRING' instructions

### September 2015 v1.4

- Changed .txt config for PIR mode

### October 2015 v1.5

- Changed how buttons are set to uninterruptible [n]

### April 2016 v1.6

- Include image of button cables

### July 2017 v2.1

- Added more image support information
- Brought version number in line with VCHD8

**For additional help please contact us:**

**www.blackboxav.co.uk/support**

**Tel: +44 (0)1639 874 100**

**Email: sales@blackboxav.co.uk**