



Mediascreen 32" Manual

Your new Mediascreen

In the Box:

- Mediascreen (32")
- Remote
- Power Cable
- 4 x Screws + Bracket (pre-installed)
- 5. Set of keys for locking compartment



A simple to use display that incorporates a HD media player with internal HDD to loop video content automatically with power on.



Allows navigation of the Android OS.

Screws and Bracket

4 x screws and a Bracket for installation of the Mediascreen to a wall or flat surface. This comes pre-installed.





Warranty

Blackbox-av provides a 12 month warranty with this product. For further information or advice please contact **info@blackboxav.co.uk**

Content Installation - Accessing USB Ports

Lockable Enclosure

The enclosure is located at the bottom of the screen and can be opened / locked with the keys provided.



USB Inputs

Inside the screen you will find a range of I/O ports including 2 x USB slots. You can use these to upload your content. See Content Upload instructions on page 3.



Content Installation - Uploading Content

All inputs are located behind a locked compartment on the underside of the unit. To the left of this compartment you will find the power socket and power on / off switch.

The Mediascreen is set-up to automatically loop content upon boot. It will arrive with Demo Content installed (unless you have made your content available to us).

To update with your own content is very simple;

Install Content on USB

Using a Windows PC, place your desired content (as .mp4 format) onto a USB device.

If you want to play more than one file in order, name your files 01, 02, 03...

With the MediaScreen turned off, insert your USB stick into one of the slots.



Importing Content

You will need the supplied remote to navigate the screen OS.

NOTE: The screen's IR sensor is located on the left side of the screen.

1) Press **Home** to exit the looping video.



2) Press Live to access the Android menu.





3) Open the Explorer app and select USB

4) Select the video file you wish to use and long press the **OK** button until an options menu pops up.

5) Select Copy



6) Return to the 'Home' panel and enter the 'Content' folder.





Importing Content (cont.)

7) Select 'Editor' from the top menu and then select 'Paste' to copy your file.



- **8)** Repeat until all files required have been copied from USB.
- **9)** Delete files from the 'Content' folder that you no longer need. Long press **OK** on the file and select 'Delete'.
- 10) Return to the Android Menu (Home and then Live on the remote)
 - 11) Select 'Fully Video Kiosk'



12) Your content should automatically play. If it does not simply power off / on the screen.

Technical Information

Panel Size	32" - 16:19
Dimensions (LxWxH) (mm)	61.20 x 720.80 x 415.80mm
Max Resolution	1920 x 1080
Display Area (mm)	697 x 390.50mm
Brightness	300cd/m2 LED
Panel Colours	16.7 M
Contrast Ratio	1800:1
Response Time	4ms
Viewing Angle	178°/178°
Operating System	Android 11
СРИ	RK3568K
RAM	2GB
Storage	16GB HDD
Speaker Type	2 x 10W
Power supply	AC 220V
Power Consumption	Maximum - <=180W Standby - <1W
Temperature	(Working Temperature) -10°C~60°C (Storage Temperature) -0°C~40°C
Video Formats	MPEG1 / MPEG2 / MPEG4 / DivX / ASP / WMV / AVI
Audio Formats	WAV / MP3 / WMA / AAC
Image Formats	JPEG / BMP / TIFF / PNG / GIF
Image Resolution	480P/720P/1080P
I/O	1 x RJ45, 2 x USB, 1 x HDMI, 1 x DC in, 1 x TF, 1 x L / R Audio Output
Included	

Included

1 x Outdoor Screen, 1 x Wall Bracket (pre-installed), 1 x Power Cable, 1 x Remote Control, 2 x Keys,

Line Drawings

32" (Drawings not to scale)





