

# SoundClip-8L

Manual v1.3



June 2017

## Contents

1. What is the SC-8L? .....	4
2. Supported Media Formats .....	4
3. In the Box .....	5
4. Setup Instructions .....	6
5. Programming Content .....	9
6. Content Configuration .....	11
7. Lighting Configuration .....	14
8. Delay and Master Volume Control .....	16
8. Status LED .....	17
Update Notes:.....	18

## Thank you for purchasing the SoundClip-8L

The SoundClip-8L is one of a range of products we offer specific to the heritage marketplace. We are confident that we have other products you will find useful and look forward to hearing from you again soon.

**T:** +44 (0)1639 767007 | **W:** [www.blackboxav.co.uk](http://www.blackboxav.co.uk)

## 1. What is the SC-8L?

The SoundClip-8L is from our range of compact, stand-alone, high quality stereo audio players. It can be used to present audio through headphones via two 3.5mm audio jacks or 2 speakers via wired terminal.

The SC-8L can present audio in a looping fashion or be activated via 8 button with one button for a single message each. It can also work in a 'Play all' function upon button/PIR activation or in a 'Next / Previous' manner with a maximum of 99 tracks.

The SC-8L also has 8 light outputs as standard which can be configured to turn on/off in a predetermined fashion when each button is pressed / certain tracks are played.

## 2. Supported Media Formats

The SC-8 supports audio in two formats;

- .mp3
- .wav

We recommend all files be used in .mp3 format, if you have issues playing any audio content we recommend you convert your audio using 'Format Factory'. This can be downloaded for free here:

<http://www.pcfreetime.com/>

### 3. In the Box



1. SoundClip-8L
2. Terminal Blocks
3. Power Supply
4. Plug Adapters
5. Screwdriver, MicroSD to USB Converter, MicroSD Card

## 4. Setup Instructions

Setting up your SC-8 is simple. You will need the following;

- The SoundClip-8L
- 12V DC Power Adapter
- Buttons or PIR (*if using button or PIR activated content, not included*)
- Headphones or speakers (*not included*)
- MicroSD Card with content on (*see programming section*)
- Terminal blocks for buttons and speakers
- Screwdriver for wiring terminal blocks
- Lighting (*if using lighting, not included*)

### REAR VIEW



### FRONT VIEW



1. Lighting Output 1-8
2. Button 1-8 input
3. 12v Supply (*for PIR and Lighting*)
4. Speaker L/R
5. 12v DC in
6. Configuration switches
7. Adjust delay between message plays
8. Adjust maximum volume level
9. 2 x 3.5mm headphone input
10. MicroSD Slot
11. Button input for volume control - / +

### Powering Your SC8L

Connect the supplied 12V DC adapter to the '12V DC in' to give power to the device.

### Connecting headphones to your SC-8

The SC-8L can support up to 2 headphones with the built in 3.5mm jack, simply connect them via the headphone 1 and 2 output.

### Connecting AutoPlay headphones / device

The SC-8L can support our range of AutoPlay handsets and devices (supplied separately) simply connect the device as explained in the separate manual supplied with said device.

### Connecting Speakers

Wire speakers to the 'Speaker Left' and 'Speaker Right' terminal block, follow the + and - directions if appropriate, insert wires and screw in place with provided screwdriver.

### Connecting Activation Buttons

To utilise button activation of the SC-8L you must wire buttons to the designated terminals. Simply insert button wire ends and screw in place using the provided screwdriver.

### Connecting Volume Buttons


The SC-8L has dedicated volume terminals, allowing you to give visitors the ability to increase or lower the volume. Connect 2 buttons to the designated terminal to do so. Simply insert button wire ends and screw in place with the provided screwdriver.

### Connecting Lighting

To add lighting (we recommend LED strip lighting) to the SC-8L you must wire them to the designated terminals. To configure how this lighting is activated please see 'Lighting Configuration' section.

### Connect PIR (SC-2 pictured)

The SC-8L can be PIR (Passive Infra-red) activated, to add a PIR you must wire it into the button terminal with the power connection wired into the + '12v Out' terminal (as pictured on a sc-2).

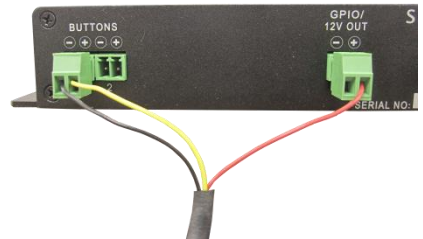

### Add content to your SC-8L

To add content to your SC-8L you must first add it to the supplied MicroSD Card and insert this into the MicroSD slot: see the 'Programming Content' section below for more details.

### Configuring the SC-8L

Deciding how the SC-8L is configured is completed using the 'Configuration Switches', this determines if it's looping, button activated or has a delay between content. See the 'Content Configuration' section for more details.

## 5. Programming Content

Content for your SC-8L is stored on the supplied MicroSD card. To add content you will need;

1. Audio Content in .mp3 format (*supports up to 99 audio files*)
2. A PC or laptop with Windows OS
3. MicroSD Card (*supplied*)
4. MicroSD to USB convertor (*supplied*)

How the content you add will be played (looping, button activated etc.) will depend on your configuration choices, find out more on this in the following 'Content Configuration' section.

The name of your audio files when added to the MicroSD card will determine the order in which they play.

**Note:** The SC-8L supports up to 99 files, these must be named 001, 002, 003 etc. The order in which files play is determined by their name, the first file must always be named 001, the second 002 and so on.

Properly named files can be added to the MicroSD card in bulk (i.e you can drag multiple files across onto the card as long as they are properly named).

### Step1

Prepare your audio files for transfer, we recommend you use .mp3 files however .wav files are also supported. Rename them '001, 002, 003' etc. depending on the order you want them played.

### Step2




Insert the MicroSD card into the MicroSD - USB converter, and connect to your PC.

### Step3

Transfer all of your content onto the SD card.

### Step4

Insert MicroSD card into the SC-8, test files play as planned. How files are activated is determined by how the dip switches are configured. See following section.

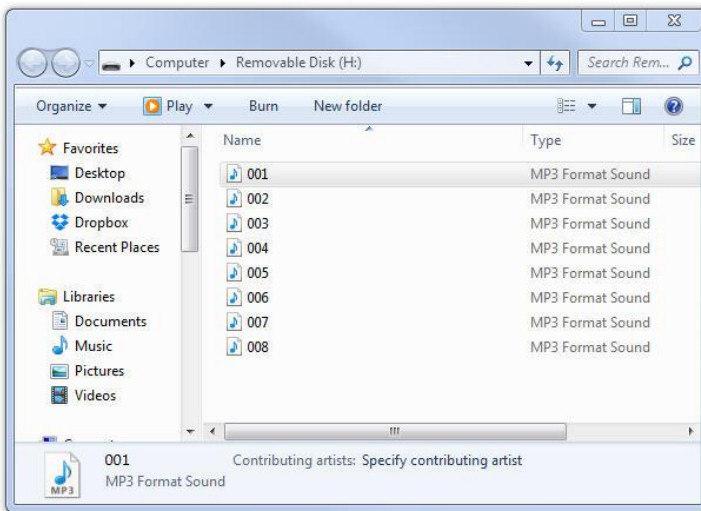

## 6. Content Configuration

Content is added to the SC-8L via MicroSD card, how this content is played is set via the dip switches located on the front of the device.



Using a screwdriver click these switches into either a Down or Up position to turn On or Off.

Dip Switch Settings: Down = On, Up = Off

### 1 - Interruptible Playback

When switch 1 is in the Down (on) position the SC-8L is set to uninterruptible this means when a file starts to play it will finish no matter if an additional input is activated. When in the Up (off) position files can be interrupted.

### 2 - Looping Playback

When switch 2 is in the Down (on) position the SC-8L will be in looping mode. All content on the MicroSD card will play in a sequential manner from power up and then begin again from the start. The 'Delay' control will specify how long the unit waits before beginning a new loop.

### 3 - Play All

When switch 3 is in the Down (on) position the SC-8L will be in 'Play All' mode, this means when triggered via button or PIR it plays through all audio files once. When in this mode the SC-8L is uninterrupted even with switch 1 set to Up (off).

#### 4 - Next / Previous

When switch 4 is in the Down (on) position the SC-8L is in 'Next / Previous' mode. This means users can navigate through all files on the MicroSD card by pressing button 1 for next and button 2 for previous.

When powered on in this mode the SC-8L will always start on audio file 1, it will then remain on the last file it played.

#### 5 - AutoPlay/Auto Retract Mode

If using the SoundClip with an AutoPlay Handset or AutoRetractor with AutoPlay you will need to place dipswitch 5 into the Down (on) position.

When in this position file 001 will play automatically upon pick up. Add a button to button 2 to allow users to move to the next track (if one exists). When in AutoPlay mode button 2 operates as 'Next Track'.

When powered on in this mode the SC-8 will start on audio file 1, it will then remain on the last file played until it resets to file 1 - this is specified by the delay timer setting (5-60sec).

**Note: If the delay timer is set to 0, the track will not reset.**

## 6 - LCD & Button Pad Activation

Put in the down (on) position to place the SC-8L in compatibility mode for the LCD display and Button Pad add-on (*sold separately*).

## 7 - Delay Range

The delay control allows you to determine how long between the end of an audio file a new file can be activated. When switch 7 is in the Up (off ) position, the control ranges from 0 - 60 seconds.

When switch 7 is in the Down (on) position, the delay control will range from 0 - 4 minutes.

## 8 - Lighting Configuration Mode

This Switch will put the SC-8L into programming mode for the lighting outputs. See 'Lighting Configuration' below for further programming instructions.

### 8 Button Mode

When all switches are in the Up (off ) Position, the SC-8L is in 8 button mode as standard, this means Button 1 plays file 1, and Button 2 plays file 2 etc.

With switch 1 in the Up (off ) position files are interruptible, put switch 1 in the Down (on) position to make playback uninterruptible.

### Sequential PIR mode

When switches 1 and 4 are in the Down (on) position the SC-8L will be in Sequential PIR mode, this means it will activate one audio track at a time via PIR sensor - moving onto the next audio track in sequence after each activation.

This allows you to activate track 001 then 002 then 003 etc. one at a time.

## 7. Lighting Configuration

As standard the lighting outputs will activate according to the track being played, for example when track '001' is being played, lighting output '1' will activate, when track '002' is being played lighting output '2' will activate, and so on.

If in looping mode the above will apply however should you have more than 8 tracks once tracks above '008' are playing, all lighting outputs will activate.

### How it works

When programming the lighting outputs you will be programming how the SC-8L reacts to each track number from 001 to 008. Any tracks above this number i.e 009, 010, 011 etc. will by default activate all lighting outputs.

This means the lighting outputs will activate in the same manner whether track '001 - 008' are played via Looping Playback, in Next/Previous mode, Play All mode or activated via the push of buttons 1 - 8.

### Programming the lighting outputs

To program the lighting outputs you will need the number of tracks you wish to program (001 - 008) uploaded to the MicroSD Card and an equal amount of buttons connected (1 - 8). Without these tracks button presses will not be registered when in lighting configuration mode.



### 1 - Enter Programming Mode

Enter Light Configuration mode via the configuration switches located on the FRONT of the SC-8L. Place dipswitch no. 8 into the ON (down) position with the remaining dipswitches in the OFF (up) position.

### 2 - Enable / Disable Lighting Outputs

Once in Light Configuration mode the lighting configuration switches located on the REAR of the SC-8L become active. Enable or Disable the lighting outputs by placing the associated dipswitches to either the ON (down) or OFF (up) position.

For example;

The above configuration sets light outputs 1, 3, 5, and 7 ON, with outputs 2, 4, 6 and 8 OFF.

### 3 - Store settings for appropriate track

With the light outputs set you need to store the configuration for each appropriate track. To configure the track simply press the corresponding button;

Button 1 = 001

Button 5 = 005

Button 2 = 002

Button 6 = 006

Button 3 = 003

Button 7 = 007

Button 4 = 004

Button 8 = 008

*Note: you can only configure one track at a time you must press the no. 8 configuration dipswitch located on the FRONT into the UP (off) position after each track is configured.*

So with the above mentioned configuration press Button 1, the Green Status LED will remain solid when you press Button 1 to indicate it has been registered. Turn the FRONT dipswitch 8 into the UP (off) position to store the setting.

Now when track '001' plays lights 1, 3, 5 and 7 will turn on, whilst the remaining lights will stay off.

Follow this procedure to program each track from '001' to '008'.

*Note: Any tracks above '008' will automatically turn all lights on*

## 8. Delay and Master Volume Control

Two controls on the front of the device allow you to alter the Delay timer and Master Volume.

### Delay

The delay control allows you to specify how long between playing content the unit must wait before more content can play. This is mainly used in conjunction with a PIR input, establishing how long between activation the unit must wait to play more content.

However it can also be used with all other modes if desired.

Switch 7 when Off (up) makes the delay control range from 0-60 seconds, when On (down) it ranges from 0-4 minutes.

### **Master Volume**

The SC-8L has dedicated volume inputs to allow users volume control. The Master Volume dictates the maximum volume available to them.

When powered up the SC-8L is set to around half the Master Volume level, this allows users to reach the maximum volume through the use of dedicated button controls.

Bear this in mind when setting the Master Volume, we recommend you set the volume to maximum through button controls before deciding what the maximum volume you require is.

## **8. Status LED**

### **Red - On/Off**

The red LED will be lit when unit is powered on, and off when unit is powered down.

### **Green - Status**

The Green LED will be lit when content is being played and blink on/off in 1 second intervals when unit is in 'Delay Mode' to indicate this.



## Update Notes:

### V1.1 - Minor formatting changes

### V1.2 - AutoPlay Support

- Added autoplay support functionality
- Button 2 becomes next track in 'AutoPlay' Mode
- Delay timer sets when to revert to track 001 in above modes

### V1.3 - AutoPlay Instructions

- Added instructions for AutoPlay range